

Induction cooker instructions

Our induction stoves are protected with a child safety lock. Please follow the next steps to activate the induction stove.

- Place the pan on the relevant burner.
- Press the general on/off button. You will now see the display light up.
- Press + to increase the temperature of the burner. If you want to decrease the temperature press -. The temperature will be indicated by a number.
- Press the on/off button again to switch off the stove.

Please note that the burner stays hot after usage.