

Microwave instructions

Indications of the buttons:

On/Off	Turn the microwave on and off
90	Select microwave power 90 watts
180	Select microwave power 180 watts
360	Select microwave power 360 watts
600	Select microwave power 600 watts
900	Select microwave power 900 watts
->123	Choose series setting
Knob	To set your desired time (push knob)
Door icon	Open the microwave door
Clock	Open and close time menu functions
P	Select program
kg	Choose weight
M1/M	Choose memory
Start	Start function
Stop	Stop function

Suitable:

Heat resistant glass, glass ceramics, porcelain, ceramics or temperature resistant plastic.

Non-suitable:

Metal, water (it can explode or cause burns), aluminium foil (it causes sparks/fire) or paper (it causes sparks/fire).